

## MANUAL

### SELNUT



All our products are made under the severe quality control.  
Read this manual for effective use of SELNUT.



**HIROTAKA MFG. CO., LTD.**

HEAD OFFICE

5-89, Ikoma-cho, Kita-ku, Nagoya City, Aichi 462-0832, Japan

Phone +81-52-991-6111 FAX +81-52-991-6115

BRANCH OFFICE

207 Castle-Shinkoiwa, 1-56-14, Shinkoiwa, Katsushika-ku, Tokyo

124-0024, Japan

Phone +81-3-3651-4230 Fax +81-3-3651-4231

Hydraulic fluid


Standard mineral hydraulic fluid

ISO VG#22 or 32

Operating pressure


19.5~30MPa

How to oiling

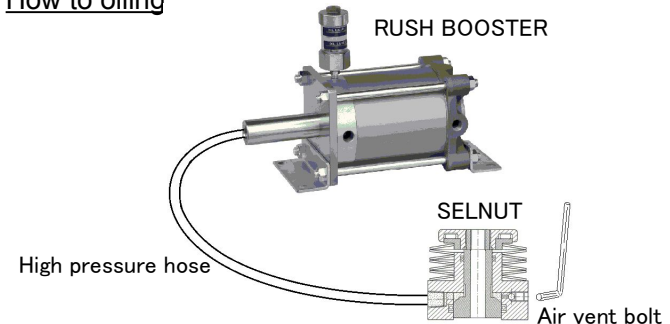


Purge the air inside SELNUT and high pressure hose before using.  
Vent the air or cloudy oil, loosen the air vent bolt while supply oil pressure to SELNUT after setting hydraulic piping.  
After purging the air, tighten the air vent bolt securely and verify that the oil dose not leak.  
If loosened excessively, plug may fly off or oil jet stream may result.

Usage examples

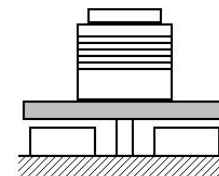

Workpiece clamp

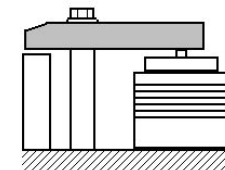

JIG TOOL clamp